

Security Key Box with combination lock

SSZ 350



Stainless steel

Weather resistant

For wall mounting



ASSEMBLY/OPERATING INSTRUCTIONS



facebook.com/BASIGmbH



[@basi_gmbh](https://www.instagram.com/basi_gmbh)



www.basi.eu

General notes

Intended use

Please read the usage and maintenance instructions carefully before mounting the security key box on the wall. Keep the manual with you for future use. If the product is passed on to any third party, include the manual with it.



Warning: No hazards should be expected if the product is assembled and operated professionally and in accordance with the manual. Small parts and packaging materials can be swallowed by children and lead to choking! Make sure that small parts and packaging materials do not get into the hands of children. Dispose of the packaging material immediately.

Please read the operating manual before using the device. It is important to note that the security key box MAY NOT be dismantled. Please handle the device with care.

The manufacturer expressly reserves the right to make technical changes.

Disclaimer

The manufacturer accepts no liability for damage or injury resulting from incorrect handling.



Disposal

Please help protect the environment by disposing of the product and the packaging materials in accordance with the local regulations. Do not dispose of the device in household waste.

Instructions for setting the password:

1) Unlocking and locking:

Turn the ❶ knob until it can no longer be turned. The ❷ display shows „green“ when the key box is unlocked and „red“ when it is locked.

 
 
2) Set the password:

Set the ❸ number wheels to the starting code 0-0-0-0 and press the ❹ password-setting-button inside until it can no longer be pressed. Two small ❺ cylinder pins appear at the front. Now set your new password using the ❸ number wheels and finally press the ❺ cylinder pins so that the ❹ password-setting-button can return to its original position. The new password is now set.

Note:

If the code is forgotten or unknown, the lock can be opened with the emergency key. There is a small opening behind each number wheel. Insert the supplied needle into this opening and turn the respective number wheel. When the correct number is reached, you will feel a slight click, allowing you to find the correct code.





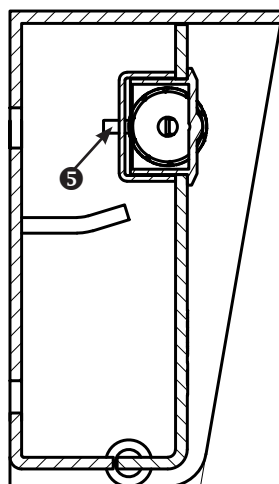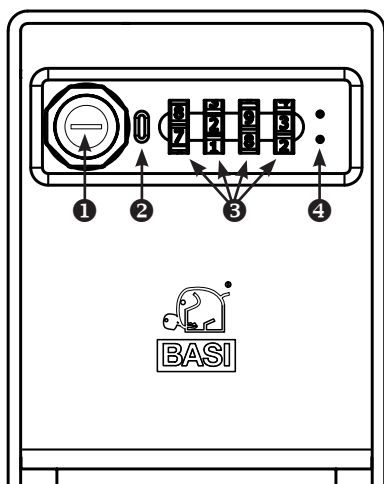

- ❶ knob with emergency key function
- ❷ display
- ❸ number wheels
- ❹ cylinder pins
- ❺ password-setting-button

Scope of delivery:

  - security key box
- mounting material
- operating manual
- 1 emergency key + needle

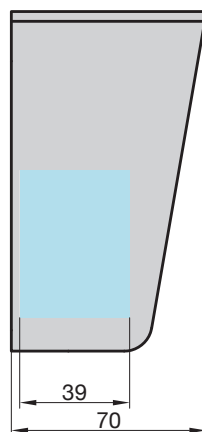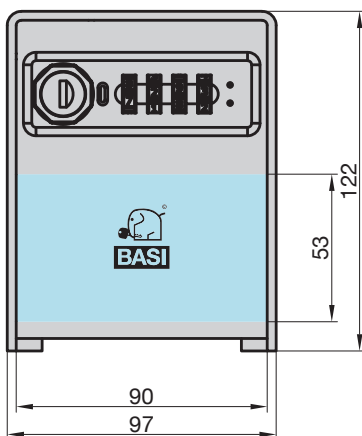

Technical specifications

Housing	Stainless steel
Application	Suitable for indoor and outdoor use
Security combination lock	With 4 digits Up to 10,000 combinations possible
Outside Dimensions:	H122 x W97 x D70 mm
Inside Dimensions:	H53 x W90 x D39 mm

© Copyright

Reproduction or duplication
(even excerpts thereof)
is forbidden without approval of:
BASI GmbH
Konstantinstraße 387
41238 Mönchengladbach
Germany

2025

This publication, including all its
parts, is protected by copyright.

Any use outside the narrow limits
of copyright law without the consent
of BASI GmbH is not allowed
and liable to prosecution.

This applies in particular to
duplications, translations,
microfilming and the feeding and
processing in electronic systems.

BASI GmbH
Konstantinstraße 387
41238 Mönchengladbach
Germany