# **SSPZ 110**

# Security key box





for wall installation

with 2 hooks

integration in locking systems possible



## **ASSEMBLY INSTRUCTION**





#### **General notes**

Follow the instructions in this manual to insert the half cylinder in the right way.

Read the usage and maintenance instructions carefully before installing the Half-Cylinder. Keep the manual with you for future use. If the product is passed on to any third party, include the manual with it.

**WARNING!** Small parts and packaging materials can be swallowed by children and lead to choking! Make sure that small parts and packaging materials do not get into the hands of children. Dispose of the packaging material immediately.

No hazards are to be expected if the device is used in accordance with the instructions and in a professional manner.


The manufacturer expressly reserves the right to make technical changes.

#### **Disclaimer**

The manufacturer accepts no liability for damage or injury resulting from incorrect handling.

### Installation note profile cylinder

Set the cam to 3 o'clock.

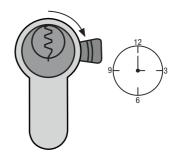

#### **Technical data**

Check that the delivery is complete:

- 1x security key box
- 2x wall plug


Additionally required:

- Half cylinder (not contained in the scope of delivery) 10/30 mm with 8-stage adjustable cam
- Crosshead screwdriver

### Mounting the key safe

The key safe is designed for both indoor and outdoor usage.

- 1. Open the key safe. Now pull the front flap of the key safe towards you.
- 2. Mark the drill holes at the desired drilling location. Please use the back of the key safe as a template.



Drill the holes.



**Caution:** Make sure that no cables or pipes are routed along the selected drilling point. Doing so can pose a risk of injury or damage to the surrounding area!

Place the dowels in the drilled holes.



**Note:** Be aware that the supplied fastening material could prove incompatible with the desired mounting location. You can purchase fastening materials that correspond to the location in question from your local hardware store.

5. Hold the key safe against the drill holes and fasten the screws into the dowels with the help of a screwdriver. Then fasten the key safe in place with the screws.

@ Copyright Reproduction or duplication (even excerpts thereof) is forbidden without the consent of: **BASI GmbH** Konstantinstraße 387 41238 Mönchengladbach Germany 2025 This publication, including all its parts, is protected by copyright. **Disposal** Any use outside the narrow limits of copyright law without the consent of BASI GmbH Help to protect the environment and dispose of the is not allowed and is liable to prosecution. product and the packaging materials in accordance with the local regulations. This applies in particular to duplications, translations, microfilming and importing and processing in electronic systems.